



GREAT DANE



AUSTERE WALL LIGHT HARD-WIRE TERMS

All Austere hard-wire option wall lights come with a Built-In (AKA Remote driver) 1-10V & Push-dim driver.

The wall lights **MUST** only be connected to the Trizo21 driver supplied (otherwise the warranty is voided).

The driver must be placed within a 15m radius from light source.

Please have clients refer this to their qualified electrician to confirm they have adequate clearance for the driver to be installed remotely.